



Milab VM-44 Link Quick Guide Manual

Thank You for Choosing a Milab Microphone!

With a history that goes back to the 1930s, Milab is one of the oldest, continuously operating microphone manufacturers in the world.

Every one of our microphones is handcrafted in our plant in southern Sweden. Our quality control is meticulous and all microphones have to pass several stages of testing, including rigorous audio tests in our anechoic chamber.

We believe in our products, which is why every microphone is delivered with its own individual frequency chart and our industry-leading lifetime warranty.

Congratulations on your purchase and welcome to the Milab family!

Thomas Nöjdh, President

Package Includes

- Milab VM-44 Link condenser microphone
- Stand holder
- Milab 3406 windscreen
- Individual frequency chart
- Quick guide manual

The Milab VM-44 Link Condenser Microphone

The VM-44 Link is the active cable version of the Milab VM-44 where the capsule and the first stage of the amplifier is separated from the main amplifier by a cable. The standard cable length is 3 meters (ca 10 feet), but it can be customised. The main amplifier connects directly to an XLR-input with no need for an XLR-cable.

The separation of the amplifier means that the capsule end of the VM-44 Link is extremely compact and light, making it an excellent choice for field recordings, stereo setups or as a discreet podium microphone when used in combination with the TS-44 table stand. There are currently three different interchangeable capsules available for the VM-44 Link: Cardioid, omni and supercardioid.

Connection

The VM-44 Link can be connected to any mic input, mixer/amplifier, or mic preamp using a standard microphone cable (XLR). The microphone is designed for phantom powering at 12-52 V (P12, P24, P48, IEC 1938) with positive voltage on the audio lines versus the cable shield.


Microphone XLR pinout:

- 1: Ground (shield)
- 2: Hot (+ phase)
- 3: Cold (- phase)




If the input device does not support phantom power, an external power supply has to be connected between the microphone and the input. Make sure that the extra phantom power has a DC-free output against the mixer, otherwise an RC network has to be incorporated to block the 48 VDC.

Connecting the microphone to an unbalanced input:



Connecting the microphone to an unbalanced input without a transformer. Pin 2 is the "hot phase" and should be connected to the input. Pin 3 should be left open:



Guidelines for Use

• The VM-44 Link should be aimed with the top grill towards the sound source. See polar diagram.

• All VM-44 series microphones have interchangeable capsules. The cardioid capsule (std) can be exchanged to an omni or supercardioid capsule (optional). Simply unscrew the mounted capsule and firmly fit the new one and turn it clockwise until stop. Do not tighten.

• The VM-44 Link is equipped with a pre-attenuation pad. In situations where sound levels may exceed 128 dB SPL, set the switch to the -12 dB position. The system may need a few minutes (2-5) to stabilize.

• The VM-44 Link should be placed in the enclosed stand holder. It is not intended to be used as a handheld device.

• For outdoor recordings, use the enclosed windscreen to minimize wind noise.

• Use the enclosed windscreen or an external pop filter to reduce popping sounds when recording close-up vocals.

• Protect the microphone from dust and dirt which may damage the membrane.

• The microphone should not be exposed to water, extreme temperatures or humidity.

Service & Cleaning

All service and repair of the microphone should be performed by authorized personnel. All metal surfaces may be safely cleaned from time to time with alcohol or methylated spirits.

CAUTION! Protect the membrane when cleaning.

Declaration of Conformity CE

Milab Microphones AB declares that this device conforms to all applicable EU directives/regulations. The aforementioned product may only be used for audio purposes and in configurations approved by the manufacturer.

Lifetime Warranty

Your microphone is covered by our lifetime warranty. If you experience any problems, please contact the place where you purchased it for further instructions.

The warranty is intended to protect the customer from manufacturing and/or material defects. It does not cover careless or improper handling (intentional or unintentional), such as physical negligence, electrical overload etc.

Terms and conditions apply and are available on request. Please visit **www.milabmic.com/warranty** for more information.

Contact Information

Milab Microphones AB Norra Strandgatan 4 S-252 20 Helsingborg SWEDEN

Phone: +46 (0)42 381620 Fax: +46 (0)42 136350 E-mail: milab@milabmic.com Website: www.milabmic.com

Milab Microphones is a trademark of Milab Microphones AB, Sweden.Copyright © Milab Microphones, Sweden. All rights reserved. Errors excepted. Subject to changes.


Legal notice/user agreement: Milab Microphones assumes no liability for damages, direct or consequential, which may result from the use of the supplied product. Under no circumstances and under no legal theory, tort, contract, or otherwise, shall Milab Microphones be held liable to you or any other person for any indirect, special, incidental, or consequential damages of any kind, including, without limitation, damages for loss of goodwill, work stoppage, computer or equipment failure or malfunction, or any and all other commercial damages or losses. This limitation of liability shall not apply to liability for death or personal injury to the extent applicable law prohibits such limitation. This User Agreement shall be exclusively subject to the laws of Sweden.

Last revision: 17 January 2024

Specifications

Product name: Type: Article number: Frequency response: Polar pattern: Pre-attenuation pad: Max SPL (1 % THD at 1 kHz): Max SPL with pad: Sensitivity at 1 kHz: Noise level (IEC 179-A): Power supply: Current consumption: Output impedance: Min. load impedance: Connection: Cable length:	Milab VM-44 Link Condenser 1128 20 to 20,000 Hz Cardioid* -12 dB (switchable) 128 dB* 140 dB* 15 mV/Pa (\pm 1 dB)* 18 dBA (typical); 19 dBA (max)* 12-52 V Phantom (DIN/IEC) 4 mA <200 Ω 1 k Ω 3-pin XLR 3 m or customer specified
Cable length: Length (top/amplifier): Diameter (top/amplifier): Net weight (top/amplifier):	1
inci weigin (top/amplifier):	50/65 g

*With cardioid capsule. Omni and supercardioid capsules are optional.

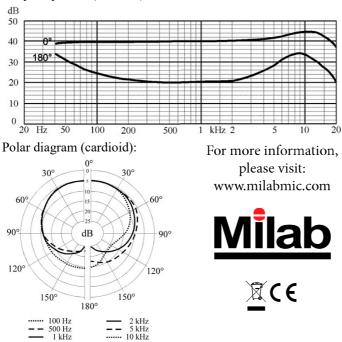

Frequency chart (cardioid):